

Adult Precision Airguns

GP-20 COMBAT

SEMI-AUTOMATIC COMPACT CO2 AIRPISTOL
INSTRUCTION MANUAL



ATTENTION: Read this manual and all safety instructions carefully before using this pistol.

AWARNING ATTENTION: READ THIS INSTRUCTION MANUAL COMPLETELY.

This airgun is not a toy. Treat it with the same respect you would a firearm. Always carefully follow the safety directions found in this instruction manual and keep this manual in a safe place for future use.

Not a toy. Adult supervision required. Misuse or careless use may cause serious injury or death. May be dangerous up to 224 yards (205 meters).

This is a high powered airgun intended for use by those 16 years of age or older. Read all instructions before using. The purchaser and user should conform to all laws governing use and ownership of airguns.



SAFETY RULES

A WARNING

Before using your new Gamo CO2 pistol, you must take the time to read and understand the following safety rules:

- \cdot Do not install a magazine which contains ammunition into the gun until you are ready to shoot. If you do install a magazine which contains ammunition into the gun and then decide not to shoot, either manually remove the magazine from the gun or shoot the remaining ammunition at a safe target.
- · An unloaded, non-pressurized gun with an "ACTIVATED" safety is safest.
- \cdot Accidents happen fast, and accidentally injuring or killing someone is a terrible thing.
- · Please shoot safety.
- · Whenever you handle a GAMO pistol, make sure the safety is "ACTIVATED" and there is no ammunition in the magazine.
- · Always use eye protection.
- · Always use hearing protection.
- · Think first, shoot second.
- · Always point the gun in a safe direction. Never point your air pistol at people or animals even if it is not loaded.
- \cdot Always keep your fingers away from the trigger until you are ready to shoot.
- \cdot Always be certain of what is behind your target. Make sure your target does not conceal a person or some object which could be harmed by the pellets.
- · Do not shoot at targets which allow ricochets or deflections.
- · Do not shoot into or at water.
- · Never use drugs or alcohol while handling this product.
- \cdot The air pistol and pellets should be kept in separate and secured places.



SAFETY RULES

- · Do not walk, run, jump or climb when carrying a loaded air pistol. A loaded air pistol should never be carried inside a vehicle.
- \cdot Never modify or alter your GAMO air pistol. Modification of the pistol may cause it to malfunction and tampering with the gun may make it unsafe.

A WARNING Do not brandish or display this airgun in public. it may confuse people and may be a crime. Police and others may think this airgun is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

A WARNING Do not use or carry the pistol in situations where it could be mistaken for a firearm.

Do not show or display the CO2 pistol in public, since it could be mistaken for a real firearm and regarded as an offence. Do not change the colour or appearance of the CO2 pistol to look like a firearm. This is dangerous and may be regarded as an offence.

A WARNING This product is not a toy. Adult supervision is required. Improper or careless use may cause serious injury. May be dangerous up to a distance of 224 yards. This compressed air pistol is recommended for users over 16. Read the instruction manual before using this product. Buyer and seller must comply with all specific laws for the use and ownership of this compressed air pistol.

BASIC DESCRIPTION



Gamo Outdoor USA, Inc reserves the right to alter these specifications without prior notice.

OPERATION MANUAL

A WARNING This is not a toy. Adult supervision is required. Misuse or careless use may cause serious injuries or death. Read this manual and the warnings and safety procedures before using. The use of CO2 pistols is not recommended for children under 16.

A WARNING

Be always sure that the gun is pointed in a safe direction; never point the gun at people or animals. Always assume and treat the gun as if it was loaded and ready to fire.


A WARNING

Never store the gun loaded at the end of a shooting session. As a safety precaution, always put "on" safety "S" position. Remove CO2 cylinder then take out the magazine and remove the rest of BB's. Store it in a safe place to prevent unauthorized use.

Learning the parts of your new Air Pistol

Learning the names of the parts of your new air pistol will help you to understand your owner's manual. Use this manual to increase your enjoyment of this pistol (FIG1)

Push down the Safety Button to "S" position

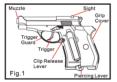

A WARNING Keep the pistol in the "ON SAFE" position until you are actually ready to shoot. Push down the safety butto to "S" position (Safety on see FIG2) The trigger cannot be pulled to fire the gun in this position.

INSERT CO2 CARTRIDGE

A WARNING If the pistol is not used for a long period of time, we recommend removing the CO2 capsule. This will unload the capsule and the valve will not be damaged. Never attempt to forcefully insert a CO2 capsule.

A WARNINGWhen removing the CO2 capsule, a small amount of gas may be released. To prevent accidents, ensure the pistol is not loaded and has the safety mechanism activated before removing or fitting a CO2 cylinder.

A WARNINGKeep CO2 cylinders away from heat and flames. Temperatures above 50°C (120°F) may cause explosion or injury. Never throw a CO2 cartridge into fire.

A WARNINGWear eye protection when handling the gas cylinder, since it can cause eye damage. Do not remove the gas cylinder until it is completely empty. Otherwise it can cause large amounts of residual gas to escape.

A WARNINGMake sure your hands do not come into contact with any CO2 gas leaks. If your skin comes into contact with this gas, it may freeze.

A WARNING Use only 12 gram CO2 cylinders. Any attempt to use others types of gas cylinders could be extremely dangerous and could result in serious injury or death. Gases other than CO2 could result in an explosion or rupture the airgun.

A WARNINGWhen preparing to store the pistol, point the barrel at the ground and make sure that the magazine is empty and that there are no steel BB in the barrel. In this way you will avoid possible accidents when using the pistol again.

A WARNINGWhen there is an obstruction in the barrel, never shoot another pellet. Always make sure that the Safety is activated before clearing an obstruction.

▲ CAUTION Make sure that the Safety is activated and the CO2 bottle has been removed before proceeding with the removal of ammunition. Before removing the CO2 bottle, make sure that it is empty of CO2.

- · Always point the gun in a safe direction. Push down the safety button to "S" position.
- · Pull grip cover from left to end of right side. (See FIG3)
- · Turn the screw counterclockwise until there is enough space to insert a CO2 cartridge. (See FIG4).
- · Insert the CO2 cartridge into the grip, first place the larger end of the CO2 cartridge into the lower part of the grip (See FIG5).
- · With the muzzle pointed in a safe direction, turn the screw clockwise to pierce the CO2 cartridge.
- · Push grip cover to original left position.










LOADING BB'S

- · Make sure the pistol is "ON SAFE" position (FIG1)
- · Point the pistol in a safe direction
- · Press the clip release button and remove the clip from the bottom to the grip frame (FIG8)
- · Pull the BB guide down to the bottom and hold on the guide (FIG7)
- · Insert up to 20pcs BB's into the magazine for the 4.5mm version.
- · Release the BB's guide.
- · Insert the loaded clip back into the bottom of the grip frame until you hear a click indicating the magazine is security locked.

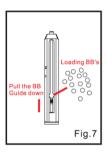





Aim at a safe target.

Due to the power of the CO2 air pistol, use extra precaution in selecting a safe target. Improper targets may cause ricochet.

Take off safety position safety on "F"

When you are sure that the target, the surrounding area and behind it is safe, position the safety "F" (FIG8) and is ready to fire.

Fire

Make sure the gun is pointed at a safe target. Once the last BB has been shot from the gun, it is still possible for the trigger to be pulled, but only CO2 will be discharged.

Put "ON" safety on "S" position

After firing, return the safety to the "ON" position on "S" position (FIG2).

A WARNING If a BB doesn't fire after completing the operation steps, do not assume that the gun is unloaded. Keep the gun pointed in a safe direction.

AWARNING After a shooting is complete, the gun should be unloaded before storing it. To unload the guns always punt "ON" safe "S" position, remove the CO2 cartridge and remove the BB's from the magazine.

A WARNING High temperatures can increase the pressure in the CO2 bottle and inside the pistol, causing above normal operating pressure. This increase in temperature may cause malfunction or permanent damage. The maximum storage or operation temperature should never exceed 50°C. If the gun is exposed to direct sunlight on a bright day, this temperature may be reached. For this reason, to ensure it functions correctly, do not expose the pistol to high temperatures or to direct sunlight for long periods. Otherwise, the CO2 bottle may overheat and rupture, which could damage the gun and cause injury to people nearby.

A WARNING

Rapid firing of the gun will cause temperature reduction in the pistol and CO2 gas. This will result in lower BB velocities and may even lower gas pressure enough so that the pistol will not fire. This condition can be avoided by allowing more time between shots. This allows the gas to increase the temperature and pressure and produce normal velocities.

A WARNING Avoid firing with a CO2 bottle that has low pressure because BB's may not be expelled from the barrel.

A CO2 cartridge contains gas under pressure, whether or not it

A WARNING Only use steel BB's that are in perfect condition. Ensure you use the correct caliber in order to prevent damage to your CO2 pistol.

ONE (1) YEAR LIMITED WARRANTY

GAMO warrants this product to be free of original defects in material and workmanship for one (1) year. This warranty applies only to goods purchased in the USA. At its option. GAMO will repair or replace this product without charge for parts and labor, providing our inspection indicates that an original defect exists. Should GAMO choose to replace the product, and the product is no longer available at the time warranty service is required, a substitution of similar performance and equal or greater value will be made. This warranty does not include damage caused by abuse, unauthorized repair or modification of any kind. There are no warranties that extend beyond the description on the face hereof. Gamo makes no implied warranty of merchantability or implied warranty of fitness (for a particular purpose). Some states do not allow limitations of implied warranty, so this limitation may not apply to you. In that event, any such implied warranty is limited to that required by law. GAMO shall not be liable for incidental or consequential damages, including but not limited to lost profits or other economic or commercial losses. The sole remedy provided in this warranty is repair or replacement of the product. To activate this warranty you must mail within 60 days the enclosed GAMO warranty card to:

> GAMO OUTDOOR USA Service Center 1700 N 2nd St, Rogers, AR 72756 Phone 479-636-1200 E-Mail: info@gamousa.com

Include with your product a note explaining the nature of the problem and be sure to indicate your name, address, and telephone number. Also include a check or money order in the amount of \$10.00 to cover postage and handling. In the event of a non-warranty repair, you will receive an estimate prior to any work being done. This warranty

gives you specific legal rights and you may have other rights which vary from state to state. As defined by federal law, this is a limited warranty.



GAMO OUTDOOR USA

1700 N 2nd St, Rogers, AR 72756 Phone 479-636-1200 E-Mail: info@gamousa.com www.gamousa.com